




Mirror

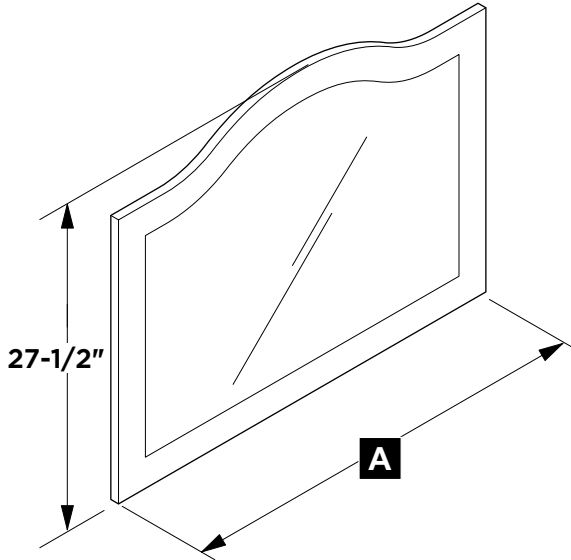

FVN3312

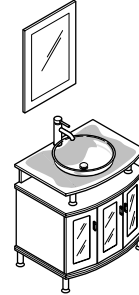


FVN3314

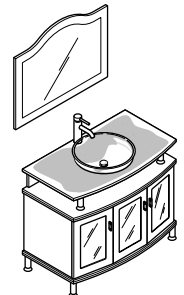


FVN3316

Model	Mirror Width A	Vanity Width B	Vanity Back C
FVN3312	19-3/4"	23-1/4"	21.5"
FVN3314	19-3/4"	29-3/4"	27.5"
FVN3316	35-1/2"	39-1/4"	36.5"

Vanity Front

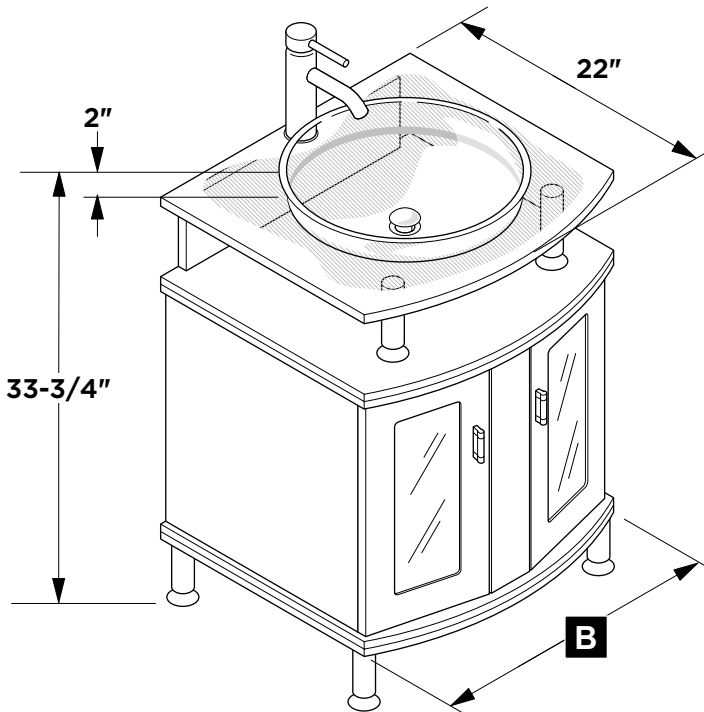



Vanity Back

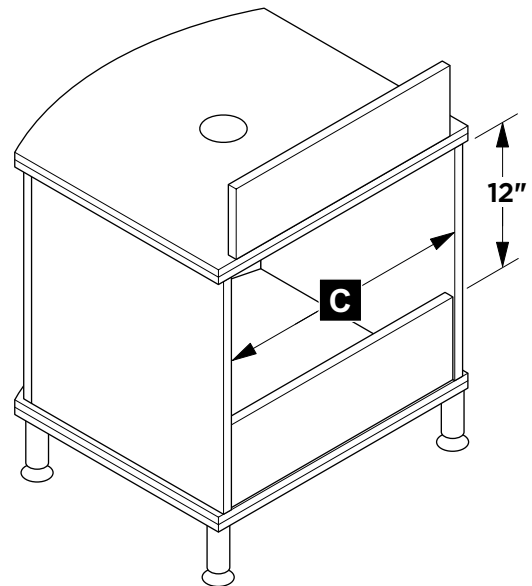

TOOLS FOR ASSEMBLY




PARTS

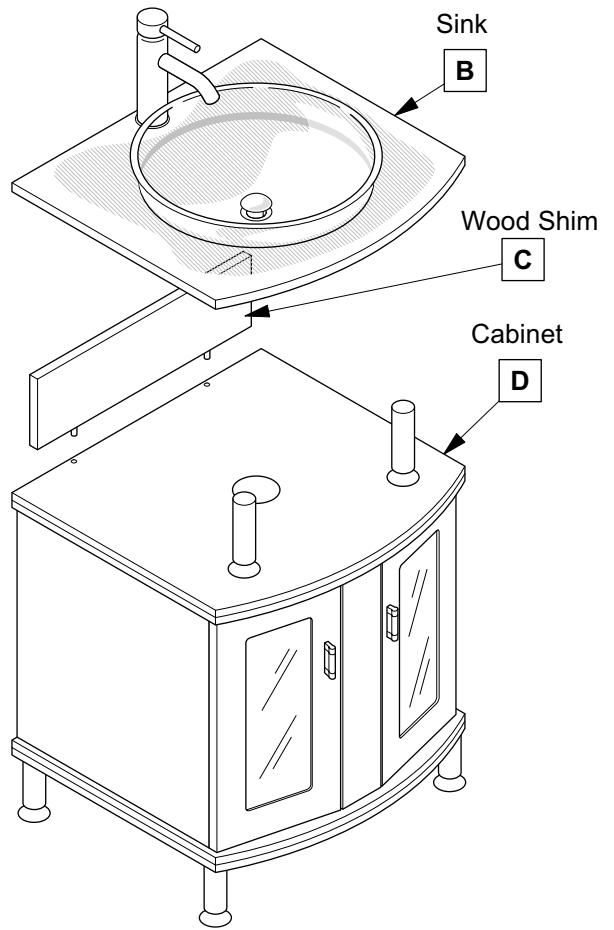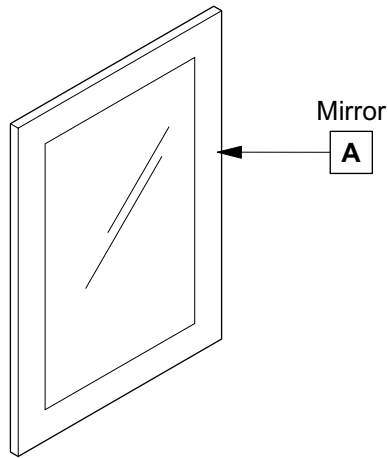

1 Install wood shim (C)

2 Install cabinet (D)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

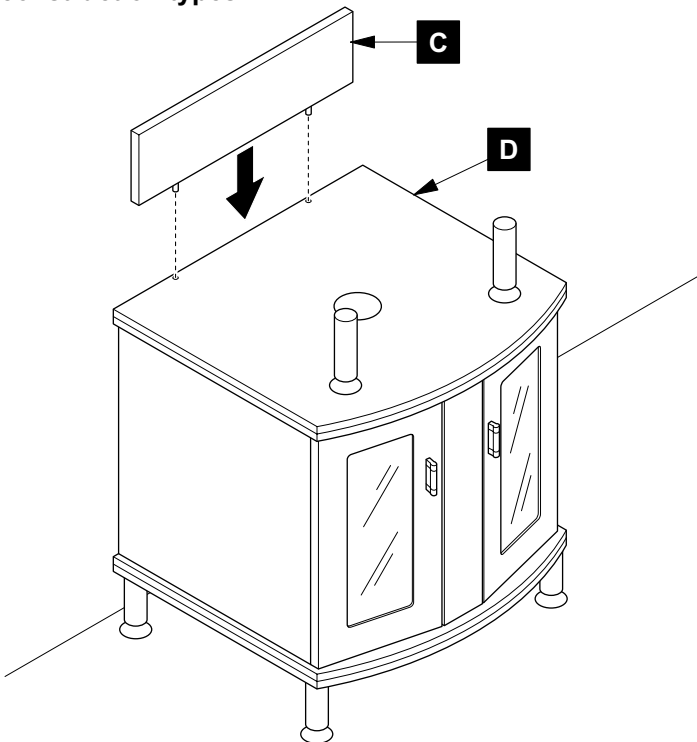

3 Apply silicone and install sink (B)

4 Install Mirror (A)

